

EUREKA[®]

DOUBLE HOB INDUCTION COOKER

INSTRUCTION MANUAL

EIC DH



**BEFORE USING THE APPLIANCE,
PLEASE READ CAREFULLY THIS MANUAL**

IMPORTANT REMINDERS


When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazardz, do not immerse cord, plugs, or the appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children. To ensure that they do not play with the appliance.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative.
8. **DO NOT** use outdoors.
9. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
10. A fire may occur if surface is covered or touching flammable material such as curtains, draperies, walls and the like when in operation.
11. Always, disconnect appliance from outlet when not in use. To disconnect, turn any control "OFF", then remove plug from wall outlet.
12. **DO NOT** use appliance for other than intended use.
13. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
14. Extreme caution must be used when moving an appliance containing hot liquids. Do not overfill cookware used on the appliance to avoid spilling when contents are boiling.
15. People with pacemakers or similar medical devices should use care when standing near this induction cooker while it is powered on. The electromagnetic field may affect pacemakers or similar devices. Consult your doctor, or the manufacturer of the pacemaker or similar medical device for additional information regarding the possible effects of electromagnetic fields emitted by induction cookers.
16. Use proper judgement and caution while using the induction cooker in outdoor environments and public areas. This Appliance should never be set-up around unattended children or those unaware of its presence. The appliance should be situated on a flat, stable surface, away from water sources such as pools, spas, sprinklers, hoses, etc.

TABLE OF CONTENTS

| | |
|--|----|
| • IMPORTANT REMINDERS | i |
| • TABLE OF CONTENTS | ii |
| • PART NAME & SPECIFICATION | 1 |
| • GENERAL INSTRUCTIONS | 2 |
| • OPERATION | 3 |
| • WORKING PRINCIPLES | 4 |
| • SAFETY PROTECTION & MAINTENANCE | 5 |

 PART NAME

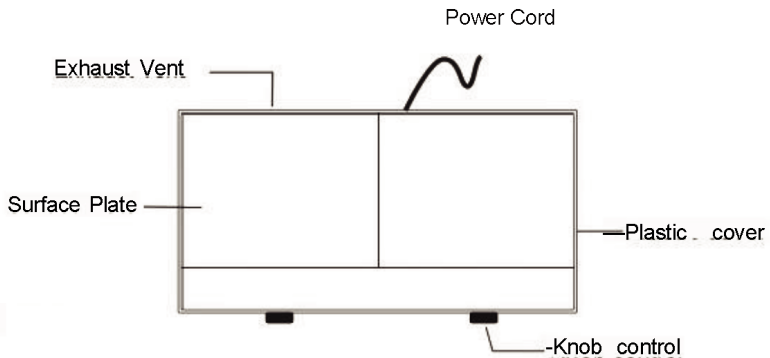

SPECIFICATIONS


| | |
|----------------|---------------|
| Model Code: | EIC DH |
| Voltage: | 220-240V a.c. |
| Frequency: | 50/60Hz |
| Rated Power: | 2000W + 1500W |
| Rated Current: | 15A |

SALIENT FEATURES

1. Our induction cooker has got unique features of knowing the voltage at the time of functioning and to read how much electricity is used after each cooking.
2. High and controlled heating from start to finish with an efficiency of 95% without any wastage of electricity. The entire equipment is 100% free from shock with microcomputer inspection and superior body structure.
3. Induction cooker will not produce any flame, heat or smoke, keeping the kitchen clean and hygiene.
4. Cooking can be performed even from outside kitchen due to the merits of the cooker.
5. Induction cooker have a sleek design that will enhance the kitchen's appearance.
6. It can be carried to anywhere since the weight of the cooker is very light.

GENERAL INSTRUCTIONS

 1. Do not plug into a socket where several other appliance are plugged in.
2. Do not use if the plug cord is damaged or when the power plug does not fit the socket securely.
3. Do not modify or repair the unit. Any damages or defects must modify or replaced by the manufacturer or accredited service center.
4. Do not use this unit near an open flame or wet places.
5. Keep out of reach of children.
6. Place on a stable and flat surface.
7. Do not heat or overheat the pot empty.
8. Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top surface or under the bottom of the stove.
9. Allow sufficient space around the cooking area (keep a minimum distance of 5 to 10 cm from the unit to walls or other items).
10. Never use the unit on low-heat-resistant materials (carpet, vinyl).
11. Do not place paper between the pot or the pan and the unit. The paper may get burnt.
12. Do not block air intake or exhaust vent.
13. CAUTION! The surface will remain hot for a period of time after use from the radiant head.
14. Unit can affect the items having or attracting magnetic fields, such as radios, televisions, automatic banking cards and cassette tapes.
15. Do not use the unit on the metallic surface.
16. Do not disconnect the power cord immediately after cooking, at least 15 seconds is necessary to cool down the unit.

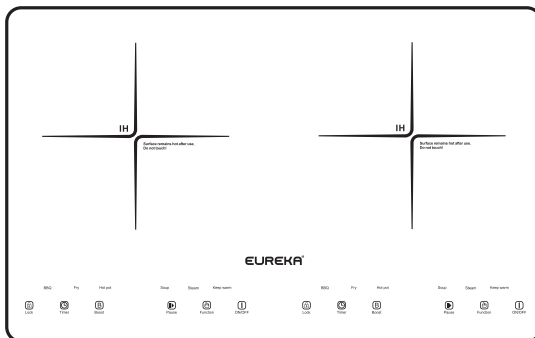


OPERATION

On / Off Button

1. Put the suitable vessel in the center after the induction cooker plugged.
2. Press "On/Off" button, will show "ON".

 Function Button

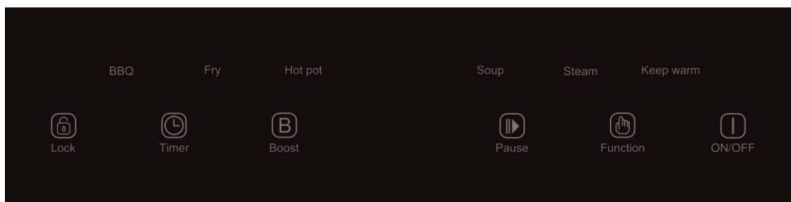

When the unit is ON, press Function key to select a Cooking function, it will activate the indicator light will show related fire power or temperature and the remaining working time.

NOTE: The glass plate is hot after use, avoid touching it.

| Cooking Function | Control Measure | Default Setting |
|------------------|-----------------|-----------------|
| BBQ | Temperature | 160°C |
| Fry | Power | 1600W/1200W |
| Hot Pot | Power | 1200W/1000W |
| Soup | Timer | 2:00 |
| Steam | Timer | 0:30 |
| Keep Warm | Timer | 0:20 |

Booster Button

If press Boost of left induction cooker will show 2000W, and Boost of right induction cooker will show 1500W.

Pause Button

Press Pause function will show "0000", the other function pause worker, and then press

pause again will remove pause.

 
Lock Button or Child Lock Feature

1. Press "Lock" Button to able the child lock feature.
2. All the buttons will be locked, except "On / Off" Button.
3. Long press "Lock" button to disable child lock feature.

Timer Button

1. Press "Timer" button, to activate timer showing "00:00"
2. The light digital can show range 00:00-03:00 mins.
3. The timer will be increased 10 mins and or decreased 1 min.
4. The time will be set done when has no any operation 5s.


WORKING PRINCIPLE

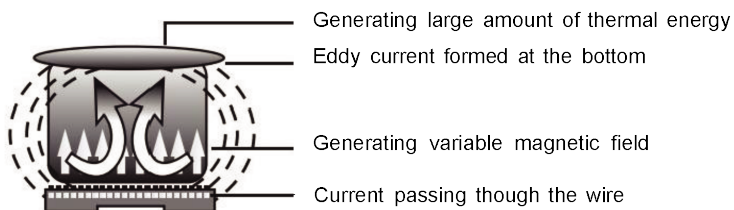

The induction cooker is mainly based in the electromagnetic induction technology. The sophisticated electronic circuitry of elektrotech produce high frequency electromagnetic field resulting high heat energy which heats up the bottom of the vessel and pass on the food directly effecting very fast cooking with thermal efficiency up to 95%.

Useable Pans

 Steel or cast iron, enameled iron, stainless steel, flat-bottom pans/pots with diameter from 12 to 26 cm.



Non-seable Pans

Heat-resisant glass, ceramic container, copper, aluminum pans/pots Rounded-bottom pans/pots with bottom measuring less than 12 cm.



SAFETY PROTECTION

When the induction cooker experiences unsuitable operations from you or by other means, the induction cooker stops functioning and exhibiting relevant codes on the display screen. This is intended solely for the protection of the induction cooker and for your guidance.

| Error code | Cause | Solution |
|------------|--|--|
| E0 | Unplaced cookware,cookware material discrepancies or diameter less than 12cm | Place pans and choose the right cookware |
| E1 | Voltage lower than 85V | Abnormal voltage until the voltage returns to normal |
| E2 | Voltage higher than 275V | Abnormal voltage until the voltage returns to normal |
| E3 | Surface sensor open or short circuit | Please call customer service or consult a professional repair outlets |
| E4 | IGBT sensor open or short circuit | Please call customer service or consult a professional repair outlets |
| E5 | Surface temperature over than 280 degree | Uneven bottom of the pot or pan with a dry, until the cooker to cool before use |
| E6 | IGBT temperature over than 105 degree over heat protection | Check the cooker inlet and outlet whether the blockage,or if the cooker cooling fan running or not |

MAINTENANCE

1. Clean after each use. Disconnect plug and wait until the unit cooled down.
2. If the surface plate becomes dirty, just wipe it with a wet cloth.
3. Keep the unit clean to prevent insects from entering the unit.
4. For the exhaust vent, clean with brush or cotton.
5. If there is something wrong with the unit, it must report and repair only by the manufacturer or Accredited Service Center.

EUREKA®

Thank you for patronizing our products!

For more comments and suggestions, please call our hotline numbers:

0998-584-2057 / 0917-814-5356