

EUREKA[®]

Gas Stove Instruction Manual

EUREKA ELECTRIC APPLIANCES PHILIPPINES CORP.

E. Rodriguez Road, Oxford Compd. Brgy. Sta. Rosa I, Marilao Bulacan

Service Hotline No.:
0998 584 2057 / 0917 814 5356



 eurekahomeappliances.com

 
 [EurekaHomeAppliances](#)

 [eurekahomeappliancesph](#)

 [eurekahomeappliances](#)

Gas Stove Parts

Please read these instructions completely before using.

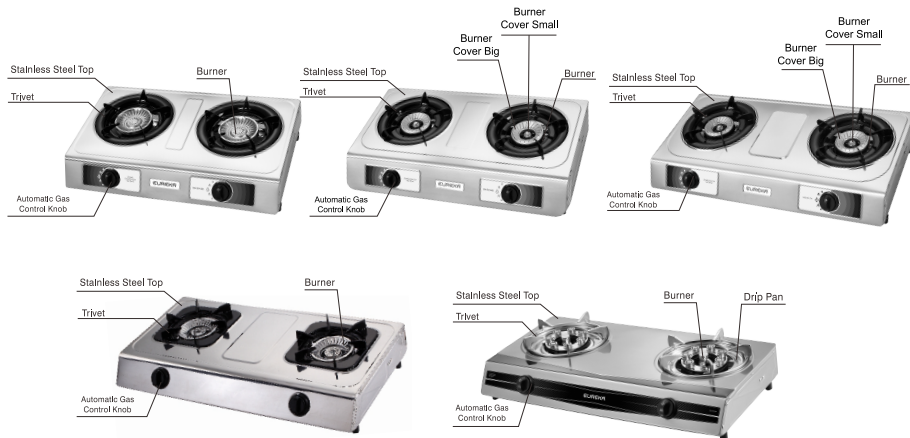

FEATURES

SPECIALY DESIGNED BURNERS- Assure optimum heat with minimum gas consumption.


ELECTRONIC IGNITION- Automatically ignites gas without using matches or batteries.

FLEXIBLE LARGE KNOB- Easy to turn makes igniting and extinguishing the flame extremely simple.


TEMPERED GLASS TOP- Physically and thermally stronger than regular glass.

TRIVETS- Especially designed for conventional cookwares.

CONNECTION OF GAS HOSE TO INLET PIPE

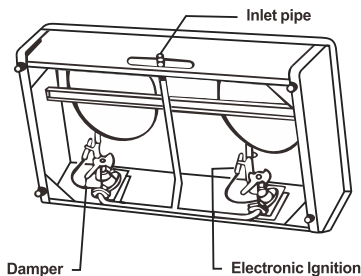

 1. Connect the gas hose by pushing it into the inlet pipe as it tightens into it.
2. Fasten the hose by tightening the clamp.

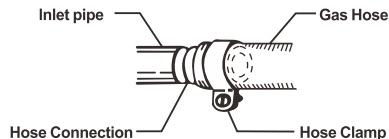


HOW TO OPERATE

1. Open the main gas valve.
2. Push the Automatic Gas Control Knob, then turn it counter clockwise until you hear the ignition click and the Burner is lighted.

When ignition does not take place on first try, this may be the result of air in the gas hose. Simply turn the knob back to OFF and try again until the flames ignite.

3. After the burner has been lighted, adjust the damper under the body either clockwise or counter-clockwise until slightly rounded blue flames are obtained.

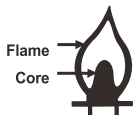

GOOD (Perfect combustion)
The whole flame is pale blue.



BAD (Insufficient Air Supply)
The flame is long and reddish.




BAD (Excessive Air Supply)
The flame is cut.

4. To Shut off, turn the Automatic Gas Control Knob to the position OFF.

CAUTION

1. Never spill water on the ELECTRONIC IGNITION SYSTEM.
2. Do not allow the holes in the burners to become clogged. Use steel wire to clean out clogged holes.
3. Never apply too much pressure to the Automatic Gas Control Knob.
4. When the stove is not in use, be sure to shut off the main gas valve.
5. Wipe the stainless steel top with a damp cloth to clean.

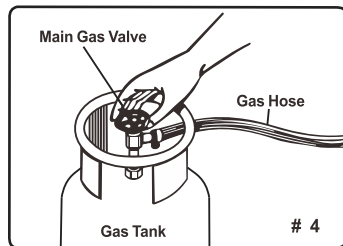

4