

EUREKA[®]

1.5 Liter Multi Cooker

INSTRUCTION MANUAL

EMC 1.5L I



**PLEASE READ THIS MANUAL CAREFULLY
BEFORE USING THE APPLIANCE**

Specification

ITEM NAME	EUREKA MULTI COOKER IVORY
ITEM CODE	EMC 1.5L I
RATED VOLTAGE	230V a.c.
RATED FREQUENCY	60 Hz
RATED POWER	600 W
UNIT DIMENSION	225 x 185 x 160 mm
BOX DIMENSION	195 x 178 x 140 mm
GROSS / NET WEIGHT	1.0 kg / 0.9 kg

Common Functions

Hot-pot

1. Remove the glass cover, then add water, neither lower than lowest water line not above the highest water line, then cover the glass cover.
2. Connect the plug into the power supply, turn the switch to “” position, the indicator light will be on and it starts heating.
3. About few minutes later, put in the food when the water boiled, after the water boiled again, turn the switch to “” and keep heating until food is well cooked; if no need to heat, then turn the switch to “OFF” to cut the electricity.

Frying

1. Connect the plug into the power supply, turn the switch to “” position, the indicator light will be on and it starts heating.
2. Then put the oil and the food as what your want and as thenormal frying.
3. Turn the switch to “OFF” to cut the electricity when frying finished.
4. This pot supply the power intermittent when use frying.

Soup

1. Remove the glass cover, then add water and food, neither lower than lowest water line not above the highest water line, then cover the glass cover.
2. Connect the plug into the power supply, turn the switch to “🔥” position, the indicator light will be on and it starts heating.
3. About 10-20 minutes later, after the water boiled, then turn the switch to “🔥”, then after 10-20 minutes, the soup is well cooked. then turn the switch to “OFF” to cut the electricity.

Boiling Water

1. Remove the glass cover, then add water, neither lower than lowest water line not above the highest water line, then cover the glass cover.
2. Connect the plug into the power supply, turn the switch to “🔥” position, the indicator light will be on and it starts heating.
3. About 10 minutes later, after the water boiled, then turn the switch to “OFF”, the electricity will be cut off and stop heating.

Noodle

1. Remove the glass cover, then add water, neither lower than lowest water line not above the highest water line, then cover the glass cover. Due to different styles, there are some differences in operation methods. Please refer to the actual product for specific operations.
2. Connect the plug into the power supply, turn the switch to “🔥” position, the indicator light will be on and it starts heating.
3. About few minutes later, put in the noodle when the water boiled, after the water boiled again, turn the switch to “🔥”, let it heat slowly and put in seasonings, after it is well cooked, then turn the switch to position “OFF”, then it will stop heating.

Steam

1. Remove the glass cover, then add water or food together, neither lower than lowest water line not above the highest water line, then cover the glass cover.
2. Connect the plug into the power supply, turn the switch to “” position, the indicator light will be on and it starts heating.
3. Put the food in the pot or in the steamer, the time of the food well cooked depend on the what kind of food and how much of them. (example: Peanut 20mins, Potato 20mins). if no need to heat, then turn the switch to “OFF” to cut the electricity.

Rice

1. Remove the glass cover, then add water and rice, neither lower than lowest water line not above the highest water line, then cover the glass cover.
2. Connect the plug into the power supply, turn the switch to “” position, the indicator light will be on and it starts heating.
3. About 10 minutes later, after the water boiled, then turn the switch to “”, then after 5-10 minutes, the rice is well cooked. then turn the switch to “OFF” to cut the electricity.

Porridge

1. Remove the glass cover, then add water and rice, neither lower than lowest water line not above the highest water line, then cover the glass cover.
2. Connect the plug into the power supply, turn the switch to “” position, the indicator light will be on and it starts heating.
3. About 10 minutes later, after the water boiled, then turn the switch to “”, then after 5-10 minutes, the Porridge is well cooked. then turn the switch to “OFF” to cut the electricity.,


Due to different styles, there are some differences in operation methods. Please refer to the actual product for specific operations. If you do not understand the operation, you can consult the customer or merchant.

Product Structure



⚠ Caution: Be careful for the hot steam, wrap the item with a oven mitt or cloth before picking it.

Product Circuit Diagram

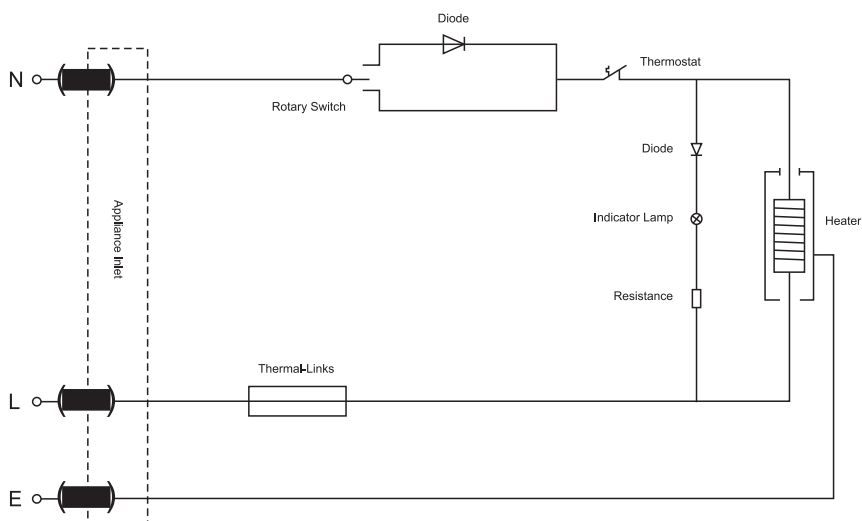

Safety Instructions

Please read carefully and pay attention to the following safety notices before use.

1. This product has anti-dry function. The added water or ingredients should not exceed the highest water level. The product should not be left unattended during operation.
2. Do not place the product in a place where children or people with disabilities can reach it to prevent burns.
3. Place the product on a flat table when in use, not near other heat sources, or above other electrical appliances.
4. When working on the product, do not touch the outer casing or steam that overflows from the glass cover to prevent burns.
5. Do not exceed the maximum water level in order to prevent the boiling water from splashing and hurting people. When boiling water, you must cover the glass cover.
6. When using for the first time, you should add water to the maximum water level line, then boil the water and then dump it. Do not use the pot before clean it.
7. Do not let the power cord hang on the table or touch hot objects.
8. Do not immerse the pot into water or other liquids to avoid short circuit.
9. Use a power outlet that matches the voltage indicated on the product nameplate.
10. If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similar professional to avoid danger.
11. The power cannot be turned on in the following cases: when there is no water in the pot, when adding water, when cleaning or moving the product.
12. In case of any malfunction of the product, please send the product to the Authorized Service Center for inspection and repair, and the user can not repair it by himself, to avoid danger, do not disassemble the body by yourself.

EUREKA[®]

Thank you for patronizing our products!

For more comments and suggestions,
please call our hotline numbers:

0998 584 2057 / 0917 814 5356

EUREKA ELECTRIC APPLIANCES PHILIPPINES CORP.

E. Rodriguez Rd., Oxford Compd., Brgy. Sta. Rosa I, Marilao, Bulacan



 eurekahomeappliances.com

 [EurekaHomeAppliances](#)

 [eurekahomeappliancesph](#)

 [eurekahomeappliances](#)