EUREKA®

15 Liter Digital Food Steamer INSTRUCTION MANUAL

EFS 15LD



PLEASE READ THIS MANUAL CAREFULLY
BEFORE USING THE APPLIANCE

Contents

Page 3 - Parts Identification

Page 4 - Important Safeguards

Page 5 - Safety Precautions

Operating Instructions

Page 6 - Specifications


Dry Protection

Page 7 - Care & Cleaning

Descaling

Storing the Steam Tray

Parts Idetification

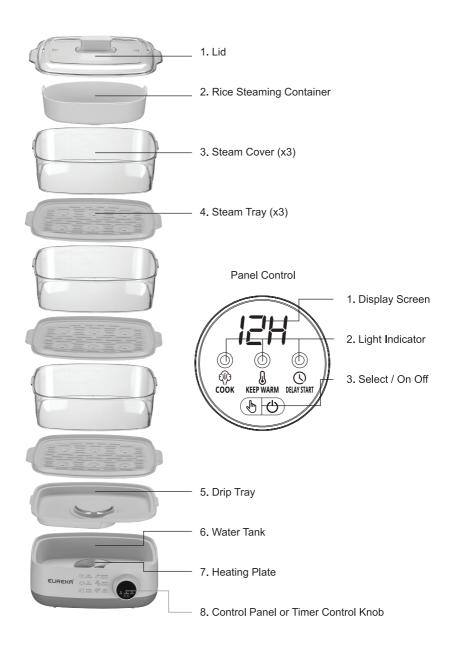

Important Safeguards

When using electric appliances, basic safety precautions should always be followed including the following:

- 1. Read all instructions carefully and retain them for future reference.
- Before connecting to the power supply, ensure that the voltage of the appliance corresponds to the voltage indicated on the power supply rating label at the bottom of the appliance.
- 3. Always disconnect appliance from the power supply when not in use or before cleaning.
- 4. Always attach the power cord to the appliance BEFORE connecting it to the power supply. To disconnect, switch off appliance first before detaching the power plug from the power supply.
- 5 Close supervision is necessary when any appliance is used by or near children.
- To protect against electric shock, do not immerse appliance or power cord, power plug, and electrical parts of the steamer in water or other liquids.
- 7. Do not allow power cord to hang over edge of table or counter or touch hot surfaces.
- 8. Do not operate appliance with damaged power cord or power plug or after the appliance malfunctions or has been damaged in any manner. In such a situation, it is recommended to return the appliance to your nearest Authorized Service Center for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
- 10. Always operate appliance on a flat, stable and sturdy surface.
- 11. When moving the appliance, always be aware not to touch hot surfaces to avoid the possible spillage of hot liquids it may contain.
- 12. Do not place on or near a hot gas, electric burner, or heated oven.
- 13. This appliance is for HOUSEHOLD USE ONLY. Do not use outdoors.
- 14. Do not use appliance for other than its intended use.
- 15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 16. Children should be supervised to ensure that they do not play with the appliance.

Safety Precautions

- When operating the appliance, ensure the water level in the water tank is between the MIN and MAX level.
- Do not add any salt, pepper, flavoring, essence, wine or any other liquids EXCEPT water into the water tank.
- 3. To detach the appliance from the power supply, always hold on the power plug and detach. Never pull the power cord.
- 4. Ensure that the base of the food steamer is not immersed in water.
- Ensure the air vents around the air vents are not obstructed in any manner.
 CAUTION: Hot steam may escape from air vents during operation. Keep hands away.
- 6. Do not place the appliance close to wall, furniture or other electrical appliances as steam and heat generated during operation may damage these items after prolonged use.
- 7. Always allow appliance to cool to room temperature before cleaning.
- 8. **NEVER TOUCH** the appliance during operation. Always use oven mitts or gloves to remove lid, rice bowl and steam baskets.
- 9. **NEVER OPERATE** the appliance without water in the water tank.

Operating Instructions

- 1. Wash all removable parts and interior of the water tank.
- 2. Fill the water container to the maximum water line (note: it is not allowed to fill the water tank with seasoning, oil or other substances).
- 3. Put the collecting pan in the water container of the electric food steamer, and then a "click" sound can be heard when it is installed (note: don't use the electric saucepan without a collecting pan).
- 4. The display screen will display after the power plug is plugged in. Then, press the "Switch/Shutdown" key, and the "Function" indicator will flash. The default time is 20 minutes, and the time will decrease if you rotate the knob to the left, and increase when you rotate the knob to the right. The adjustable time range is 10-60 minutes. After selecting time, it will heat 5 seconds later.
 - 4.1 Under the power-on state, press the "Switch/Shutdown" key two times, and the "Thermal Insulation" indicator will flash. The default time is 30 minutes. Rotate the knob to adjust the time. The adjustable time range for thermal insulation is 10-120 minutes. After selecting time, it will keep warm 5 seconds later.
 - 4.2 Under the power-on state, press the "Switch/Shutdown" key three times, and the "Reservation" indicator will be always on. The default time is 2 hours. Rotate the knob to adjust the time, and the adjustable time range for reservation is 1-12 hours. After 3 seconds, the product will enter the "Function" adjustment mode. Then the "Function" indicator will flash, rotate the knob to adjust the time, and the adjustable time range for function is 10-60 minutes. After selecting time, it will enter the reserved state 5 seconds later.
 - 4.3 The countdown time includes the set time. For example, if the reservation time is 8 hours and the heating time is 40 minutes, all procedures will be completed within 8 hours.
- 8. After working, the product will "beep" 5 times continuously and the display will show it.
- 9. If the water container is short of water, the display will show it.
- 10. Keep long press of "Switch/Shutdown" key for 3 seconds to turn off the product.

Specifications

ITEM NAME	EUREKA 15 Liter Digital Food Steamer
ITEM CODE	EFS 15LD
RATED VOLTAGE	230V a.c.
RATED FREQUENCY	60 Hz
RATED POWER	800 W
UNIT DIMENSION	310 x 264 x 429 mm
BOX DIMENSION	340 x 293 x 390 mm
GROSS / NET WEIGHT	3.1 kg / 2.7 kg

Additional Information

- 1. Place the Electric Food Steamer on a flat and horizontal surface.
- 2. Don't put too much food on the tray. Allow sufficient space between food to ensure smooth flow of steam.
- 3. Put larger pieces of food or the food that needs longer cooking time on the bottom steaming rack.
- 4. You can put eggs on the egg rack for egg steaming.
- 5. If you want to steam more food, you can add a tray and a steaming bucket. Be sure to properly place the steaming bucket to avoid shaking.
- 6. A cover should be placed on the top of the steaming bucket.

Dry Protection

This appliance features a dry protection function with a built-in thermostat to protect dry boiling. In the event of water drying up – do not operate the appliance when water is below the minimum level to avoid discoloration.

The pilot lamp will power on and off repeatedly when water is below the minimum level. It is strongly recommended to add in water to continue operation and to avoid damaging the appliance.

Care and Cleaning

- Detach the power plug from the power supply and let the appliance to cool down completely before cleaning.
- 2. Empty water inside the water tank and clean with a damp cloth.
- 3. All other removable parts can be washed in warm sudsy water or cleaned in the dishwasher.
- 4. Clean the frame ring after every use.
- 5. Clean the exterior body using a moist cloth.
- 6. NOTE: some natural coloured juices from food such as carrots or beetroot may stain the drip tray and water tank. This is normal and will not affect performance. To prevent staining, wash these two parts IMMEDIATELY after every use. Apply a little mild bleach if necessary and rinse thoroughly.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- 8. Never immerse the appliance in water, nor rinse it under the tap.

Care and Cleaning

- After using for about 2-3 months, some chemical deposits may build up in the water tank, or on the heating element. This is normal. The amount of deposits depends on the hardness of water in your area.
- 2. It is important to descale the reservoir for the purpose of prolonging its life cycle.
- 3. Fill the water tank up to the "MAX" level.
- Add a teaspoon of citric acid or 6 10 slices of lemon and operate the appliance for about 30 minutes.
- 5. Do not use any other chemical or detergent.
- 6. When boiling is complete, unplug from the power supply and allow the unit to cool down before pouring the mixture out of the water tank.
- Rinse the reservoir several times with cold water. Clean other parts and allow to dry before storing.
- 8. Regular descaling should be performed once every 6 months.

Storing the Steam Tray

- 1. Place the rice bowl upside down in the drip tray.
- 2. Avoid stacking two baskets together as they may stick to one and another.
- 3. Turn all parts over on the base unit.
- 4. Cover the parts with the lids.

EUREKA

Thank you for patronizing our products!

For more comments and suggestions, please call our hotline numbers:

0998 584 2057 / 0917 814 5356

EUREKA ELECTRIC APPLIANCES PHILIPPINES CORP.

E. Rodriguez Rd., Oxford Compd., Brgy. Sta. Rosa I, Marilao, Bulacan



- eurekahomeappliances.com
- **f** EurekaHomeAppliances
- @ eurekahomeappliancesph
- eurekahomeappliances