EUREKA

1.5 Liter Power Blender INSTRUCTION MANUAL

EPB 1.5L



PLEASE READ THIS MANUAL CAREFULLY
BEFORE USING THE APPLIANCE

Important Safeguards

When using this electrical appliance, basic safety precautions should always be followed, including the following:

- 1. Read all instructions.
- 2. Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
- 3. Do not let cord hang on hot surface or over edge of table or counter.
- 4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- 5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 6. Close supervision is necessary when any appliance is used by or near children.
- 7. Avoid contacting the moving parts while operation.
- 8. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- 9. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
- 10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to "off", then remove plug from wall outlet by grasping the plug, not the cord.
- 11. To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
- 12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- 13. Children should be supervised to ensure that they do not play with the appliance.
- 14. Do not leave the machine on unattended.
- 15. When removing the blender from the motor unit, wait until the blades have completely stopped.
- 16. Always operate blender with cover in place.
- 17. Always use the appliance on a secure, dry level surface.
- 18. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
- 19. Do not use outdoors.
- 20. Do not use appliance for other than its intended use.

At the beginning of use of this product, you may smell some odor, which is a normal phenomenon when the motor is first used. Please do not worry, this odor will automatically disappear after a few uses


WARNING: Potential injury from misuse. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

CAUTION: Ensure that the blender is switched off before removing it from the stand. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

Specifications

ITEM NAME	EUREKA 1.5 LITER POWER BLENDER
ITEM CODE	EPB 1.5L
RATED VOLTAGE	230V a.c.
RATED FREQUENCY	60 Hz
RATED POWER	800 W
UNIT DIMENSION	215.5 x 184 x 395 mm
BOX DIMENSION	363 x 223 x 274 mm
GROSS / NET WEIGHT	4.49 kg / 3.67 kg

Household Use Only - Know Your Blender

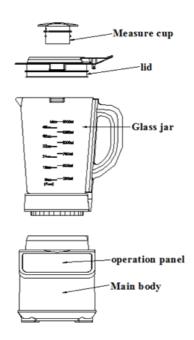


How To Use

First use


- 1. Before first use, open the packaging and remove the product, and place all components on the table.
- 2. Assemble the jar component (including the measuring cup, cup cover, and glass jar) onto the body base. Except for the base, all other detachable components can be disassembled and cleaned. Please refer to the cleaning precautions in the last chapter.

Usage steps:


1. Put ingredients into cup: Wash and cut the ingredients, then put them into a juice cup and pour in liquid such as milk. (See Fig.1)

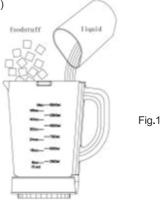

2. Clean and cut the ingredients and put them into the jar. Close the lids and turn the lids by clockwise, place the measure cup exactly into the lid by aiming at a fixed position in the middle of the lid and turning the cup clockwise until tight. (See Fig.2)

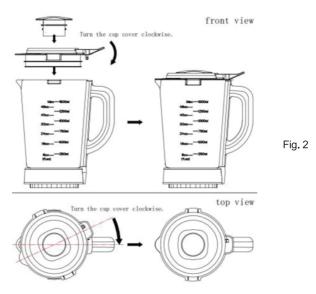

- 3. Install the jar component into the body:
 - 3 .1. Install the juice cup assembly in the position where the lower part "▼" of the handle is aligned with the main body "♠",
 - 3.2. Rotate clockwise to position (when you hear a "click" sound, it indicates that the cup is fully seated). At this point "▼", align the position on the body "♠". (See Fig.3)

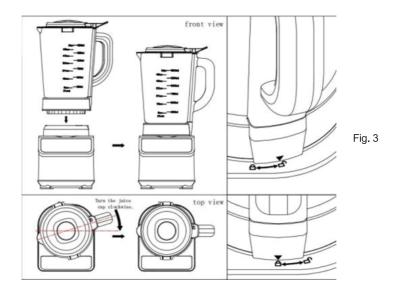

4. Function operation and display panel.



4.1. Six function menu operations:

After power on, all indicator lights will be on. When touching any of the six function menu options, the option will flash. Then, press the "Start/Stop" button to start the machine. If you need to switch to other functions during operation, you must first press the "Start/Stop" button to stop the current operation.

4.2. P Operation:

After power on, all indicator lights are on. When touching the "P", the P remains on (other lights are off), and the machine runs. Release the P and the machine will pause.

4.3. +/- operation

After power on, all indicator lights are on. When touching the plus/minus, the digital display shows the current speed. The "plus/minus" and "START" lights are on, while the other lights are off. Click on the "Start/Stop" button to start the machine running. Click on the "Start/Stop" button again, and the machine will stop running.


Usage

- 1. Peel or core the fruits or vegetables, and then cut them into small pieces (approximately 15 x 15 x mm).
- 2. Put the food that needs to be stirred into jar, add an appropriate amount of drinking water or other liquids, and the ratio of food to water is 2:3. The total amount of mixture cannot exceed the maximum mark on the cooking cup.

Attention: Please do not add HOT water to the jar or Working without liquid.

- 3. Cover the lid and ensure that the measuring cup is properly closed.
- 4. Plug the power cord into a standard wall mounted power outlet.
- Select the menu button for setting your mixing task function, click the start button, and start the machine to process ingredients.
- 6. For fast or fragile mixing tasks, please press the "P" button and hold for a few seconds, then release and operate several times until you achieve the desired effect. If you want to add food while the jar is working, please open the measuring cup and put the food into it through the feeding port on the lid. (See Fig.4)

Note: For each use, the consecutive operation time should not exceed 2 minutes, and at least 10 minutes rest time must be maintained between two continuous cycles. Please let the unit cool to room temperature before performing next operation cycle.

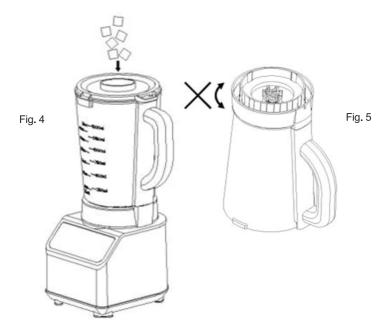

When the desired effect is achieved, press the "Start/Pause" button to stop working

Attention:

- 1. Please ensure that the product has cooled to room temperature before the next work cycle begins.
- 2 If you want to stop the product while it is running, please press the "Start/Pause" button to stop working.

Important Operating Tips

- · For best circulation of food that is to be blended with some liquid, pour the liquid into the jar first, then add solids.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, extracting juice from fruit and vegetable
- The following items should never be placed in the unit as they may cause damage: bones, large pieces of solid, frozen food, or tough foods.

The using of grinding cup:

- 1. Rotate open the grinding cup from grinding cutter head components and place on the table with open side up
- 2. Put bean food into grinding cup (About ≤50g) and turn-lock clasp well the grinding cutter head components, then lock it on the motor unit;
- 3. Plug the power cord into a standard wall outlet;
- 4.Touching the "P" for your task.(generally need about 15 seconds), When achieved the effect you want, turn off the finger to "P".

Note: For each use, the consecutive operation time should not exceed 15 seconds. At least 10 minutes rest time must be maintained between two continuous cycles, let the unit cool to room temperature before performing next operation cycle.

How To Use

This product contains no user serviceable parts. Refer service to qualified service personnel.

- 1. Before cleaning, unplug the blender.
- 2. Always wash immediately after use for easier cleaning. Don't let food dry on the jar assembly as this will make cleaning difficult.
- 3. Pour a little warm soapy water into the jar and turn the knob to P position for a few seconds. And then empty the jar.
- 4. Disassemble all detachable parts, remove the jar assy from the main unit, the jar holder can disassemble, it must clean together with the jar.
- 5. Rinse the measure cup, lid, seal ring, and jar and blade assembly by hands or in a dishwasher and then dry. They are dishwasher safe components, but the temperature setting shall not exceed 60°C.
- 6. Brush the blade clean using warm soapy water, then rinse thoroughly under the tap. Don't touch the sharp blades, handle carefully. Don't immerse the blade assembly in water. Leave to dry upside down away from children.
- 7. Wipe the motor unit surface with a damp cloth and dry thoroughly. Remove the stubborn spots by rubbing with non-abrasive cleaner. If liquids spill into the motor unit; first unplug the unit, then wipe with a dry cloth and dry thoroughly.

Causion

- 1. Do not immerse the motor unit in liquid to prevent the risk of electric shock.
- 2. Do not use rough scouring pads or cleansers on parts or finish.
- 3. Do not place engine base into dishwasher for cleaning. This unit is not available for dishwasher.



Thank you for patronizing our products!

For more comments and suggestions, please call our hotline numbers:

0998 584 2057 / 0917 814 5356

EUREKA ELECTRIC APPLIANCES PHILIPPINES CORP.

E. Rodriguez Rd., Oxford Compd., Brgy. Sta. Rosa I, Marilao, Bulacan



- eurekahomeappliances.com
- **f** EurekaHomeAppliances
- @ eurekahomeappliancesph
- eurekahomeappliances