

EUREKA[®]

VERTICAL OVEN TOASTER INSTRUCTION MANUAL

EEOT 12LV



PLEASE READ ALL INSTRUCTIONS,
CAREFULLY BEFORE USE.

IMPORTANT SAFETY INSTRUCTIONS

When using your Electric Oven, basic safety precautions should always be observed, including the following:

1. Read all instructions.


2. Do not touch hot surfaces. Always use handles or knobs.
3. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or any other liquids.
4. Do not let cord hang over edge of table or counter, or touch hot surfaces.
5. Do not operate appliance with damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
6. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
7. Do not place on or near a hot gas or electric burner.
8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
9. To disconnect, turn the time control to OFF, then remove the plug. Always hold the plug, and never pull the cord.
10. Extreme caution must be used when moving a drip pan containing hot oil or other hot liquids.
11. Do not cover crumb tray or any part of the oven with metal foil. This may cause the oven to overheat.
12. Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.
13. Do not clean the inside of the oven with metal scouring pads, pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
14. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric risk.
15. A fire may occur if the oven is covered or touching flammable material, including the curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
16. Extreme cautions should be exercised when using cooking or baking containers constructed of anything other than metal or ovenproof glass.
17. Be sure that nothing touches the top or bottom elements of the oven.
18. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
19. Do not store any materials other than manufacturer's recommended accessories in this oven when not in use.
20. Always wear protective, insulated oven gloves or use a special handle when inserting or removing items from the hot oven.
21. This appliance has a tempered safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can still break around edges. Avoid scratching door surface or nicking edges.
22. Do not use outdoors.
23. Do not use appliance for other than intended use.
24. Children shall not play with the appliance.
25. Cleaning and user maintenance shall not be made by children below 8 years old and without any supervision.
26. Keep the appliance and its cord out of reach for children less than 8 years.
27. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
28. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
29. Children should be supervised to ensure that they do not play with the appliance.
30. The door or the outer surface may get hot when the appliance is operating.
31. The temperature of accessible surfaces may be high when the appliance is operating.

TABLE OF CONTENTS

- IMPORTANT SAFETY PRECAUTIONS i
- TABLE OF CONTENTS ii
- PARTS & SPECIFICATIONS 1
- IMPORTANT REMINDERS 2
- OPERATION 3
- PROPER CLEANING 4

Getting to Know Your New Oven

MAIN COMPONENT

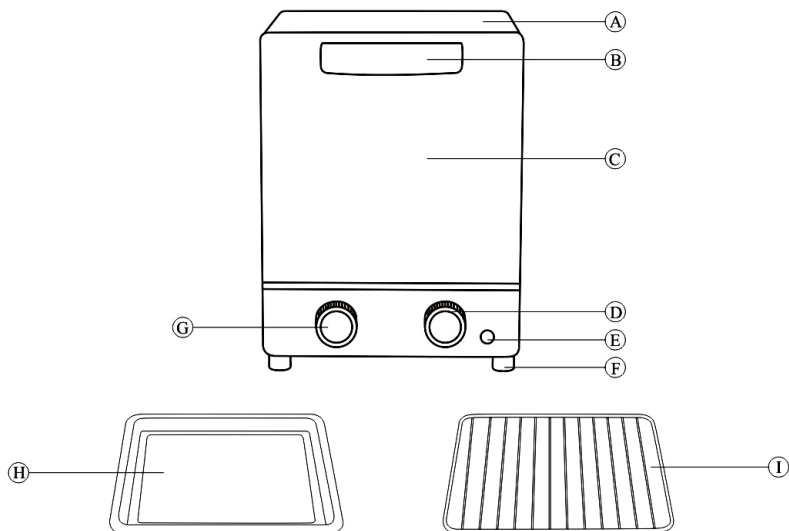

A: Housing

B: Handle

C: Front panel

D: Timer

I: Wire rack

E: Indicator light

F: Oven foot

G: Temperature control knob

H: Bake tray

Specification

Model Code:	EEOT 12LV
Voltage:	220-240V a.c.
Frequency:	50/60Hz
Rated Power:	800 Watts
Rated Current:	3.3A

Important Reminders

▲ Before using your electric oven for the first time, be sure to:

1. Read all of the instruction included in this manual.
2. Make sure that the oven is unplugged and the Time control is in the "OFF" position.
3. Wash all the accessories with soap and running water or in the dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven, plug oven into outlet and you are ready to use your new toaster oven.
5. After re-assembling your oven, we recommend that you run it at the highest temperature (230°C) on the toast function for approximately 15 minutes to eliminate any packing residue that may remain after shipping. This will also remove all traces of odor initially present.

Please Note: Initial start-up operation may result in minimal smell and smoke. This is normal and harmless. It is due to burning of the protective substance applied to the heating elements in the factory.

Please familiarize yourself with the following oven functions and accessories prior to first use:

- **Temperature Control:** choose the desired temperature from 60°C to 230 °C for cooking.
- **Main Function Control:**

Broil(): on this position, the upper two heating elements can work.

Bake(): on this position, the lower two heating elements can work.

Upper & Lower heater (): on this position, both upper and lower heating elements can work together.

- **Timer:** when you turn activate the timer segment of the control, turn to the right (clockwise) to toast or use as a timer. This function also has a bell rings at the end of the programmed time.

Indicator light: It will light when the heating element is turned on.

Inside Lamp: It will work when the oven is turned on.

- **Bake Tray:** For use in broiling and roasting meat, poultry, fish and various other foods. Also to be used as a drip pan to catch the oil drippings.
- **Tray Handle:** Allows you to pick up the wire rack, and bake tray when they are hot.
- **Wire Rack:** For toasting, baking, and general cooking in casserole dishes and standard pans.

CAUTION: TO AVOID RISK OF INJURY OR BURNS, DO NOT TOUCH HOT SURFACES WHEN OVEN IS IN USE. ALWAYS TAKE EXTREME CARE WHEN REMOVING BAKE TRAY, WIRE RACK OR ANY HOT CONTAINER FROM A HOT OVEN, ALWAYS USE TRAY HANDLE OR OVEN MITT.

Operating Instruction: How to Broil

For best results, it is recommended that you pre-heat the oven for 15 minutes on 230°C.

Operation:

- Place food on the wire rack and slide into the top rack position. Food should be placed as close as possible to the top heating element without touching it.
- Put back tray at the lowest rack position to catch possible dripping.
- To prevent fire hazards, it is suggested to wrap food with aluminum foil.
- Set the temperature control knob to appropriate temperature.
- Brush food with sauces or oil, as desired.
- Turn time knob to your desired cooking time.
- Turn food over midway through the prescribed cooking time.
- To check or remove roast, use the tray handle provided to help you slide the roast in and out.
- Once the food is cooked, turn off the power and remove the food using oven mitts or tongs.

How to Bake

Please note that the BAKE function uses only the bottom heating elements. For best results, it is recommended that you pre-heat the oven for 15 minutes on 230°C.

Operation:

- Set temperature control to appropriate temperature.
- Place the wire rack on the lowest or middle rack support guide.
- Place food on the wire rack and slide into the rack.
- Food should be placed as close as possible to the lower heating element without touching it.
- Brush food with sauces or oil, as desired.
- Turn time control to your desired cooking time.
- Turn food over midway through the prescribed cooking time.
- Once the food is cooked, turn off the power and remove the food using oven mitts or tongs.

How to Toast

Please note that the TOAST function uses all the heating elements. Large capacity oven allows for toasting 4 to 6 slices of bread, 6 muffins, frozen waffles or frozen pancakes. When toasting only 1 or 2 items, place food on the bake rack in the center of the oven.

Operation:

- Place food on the wire rack and slide into the middle rack position.
- Set the Temperature Control Knob to appropriate temperature.
- Ensure Back tray is in place.
- Turn the time control knob to your desired cooking time.
- Bell will ring to signal the end of the toast cycle.
- Once the food is cooked, turn off the power and remove the food using oven mitts or tongs.

Proper Cleaning

ALWAYS CLEAN THE APPLIANCE AFTER USE.

1. Remove the plug from the wall socket and allow the appliance to cool down completely.
2. Use warm water with a small amount of washing-up liquid to clean the baking tray, the grill and the removal tool. Rinse the items with plenty of water and dry them thoroughly
3. Use a damp cloth to clean the interior and exterior of the oven and the door. Dry them thoroughly.
4. Place all the items back in the oven and store the oven.



- Make sure the plug has been removed from the plug socket before cleaning the appliance.
- Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.
- Never immerse the appliance, the power cord or the plug in water or any other fluid.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations
Never throw it away to the rubbish, so you will help to the improvement of the environment

EUREKA[®]

Thank you for patronizing our products!

For more comments and suggestions,
please call our hotline numbers:

0998-584-2057 / 0917-814-5356

 eurekahomeappliances.com

 /EurekaHomeAppliances

 /EurekaHomeAppliancesPH

 @EurekaHomeAppliances