EUREKA®

35 cm Electric Griller

INSTRUCTION MANUAL

EEG 35



PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE APPLIANCE

General Safety Instructions

- Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible,the box with the internal packing.
- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use. Do not user it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat,direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put it in water.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories.
- If you should leave the workplace, always switch the machine off or remove the plug from the socket (pull the plug itself, not the cable).
- To protect children from the dangers posed by electrical appliances, make sure that the cable is hanging low and that children do not have access to the appliance.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be replaced only by the manufacturer, by our customer service or by a qualified person and with a cable of the same type.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Use only original spare parts.
- Pay careful attention to the following “Special Safety Instructions”.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Specification

ITEM NAME	Eureka 35 cm Electric Griller
ITEM CODE	EEG 35
RATED VOLTAGE	230V a.c.
RATED FREQUENCY	60 Hz
RATED POWER	1200 W
UNIT DIMENSION	400 x 282 x 85 mm
BOX DIMENSION	405 x 285 x 92 mm
GROSS / NET WEIGHT	2.4 kg / 1.4 kg

Special Safety Notes

· Caution: During operation the temperature of the exposed surface may be very hot. Danger of burns.
· Caution: Charcoal or similar fuels must not be used for this device.
· Keep at an adequate safety distance from inflammable objects such as furniture, curtains, etc. Keep at a minimum distance of at least 15 cm from the wall.
· Place the unit on a flat and heat-resistant surface.
· Allow the unit to cool down before you put it away.
· Never let any water get into the fat.
· Distribute weight evenly on the grill shelf. Maximum weight: 2 kg.

WARNING: In order to avoid overheating, this appliance shall not be covered by any solid or flexible material such as an aluminum tray, aluminum foil or trays made of other heat resistant material. The use of such items or materials on the grille would impair the safety of your product and could lead to serious damage.
- The appliance is for household indoor use only!

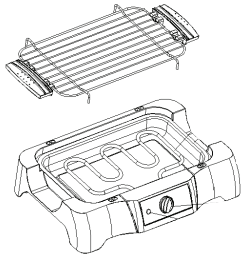


Fig. 1


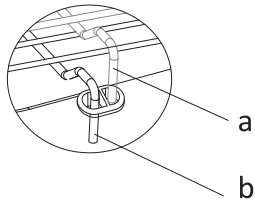


Fig. 2

Preliminary Operations

Overview of the Components

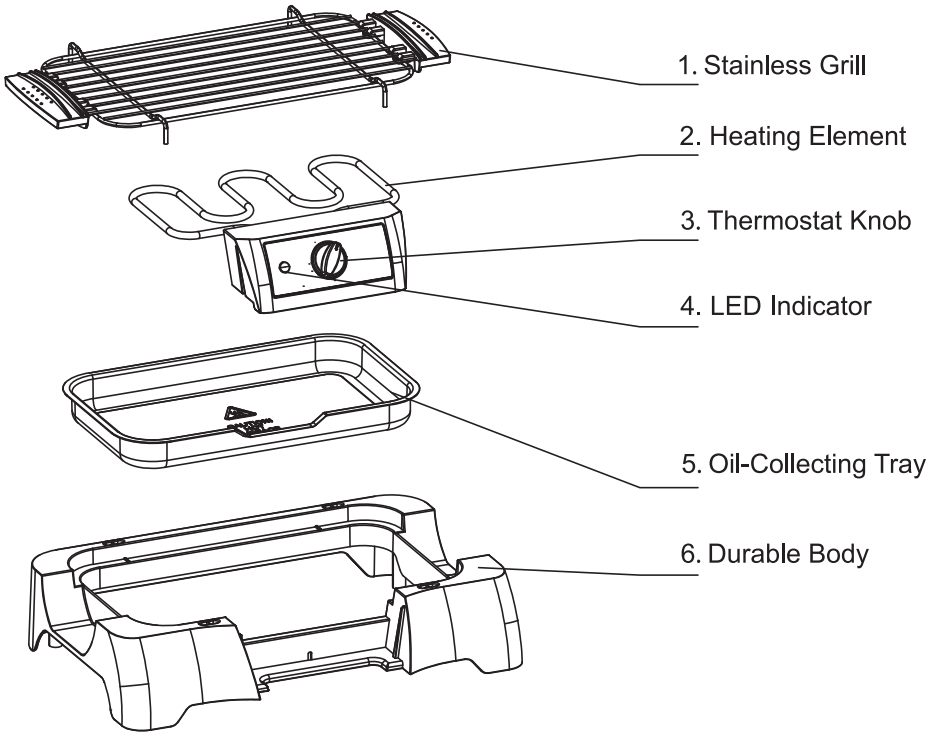

Please see illustration 1.

- Remove any packaging material that may be present.
- Clean the grill grid (1)
- Assemble the grill as shown in illustration 1.

· Pour 1.5 litres of cold water into the grill tray up to the “MAX” Mark.

Note: Pour in the water until it covers the reflective metal sheet . The water bath and the metal sheet prevent excessive heat radiation in the area of the standing surface of the grill. Therefore you should always grill food **using water** and **with the reflective metal sheet in place.**

Before using for the first time, fill the grill tray with water and use it for 15 minutes to remove the protective film from the heating coil. Select the MAX thermostat position. The presence of smoke is normal. Make sure that a sufficient level of ventilation is available.

Preheat the device before use for approximately 5 minutes.

Note: Pour in the water until it covers the reflective metal sheet . The water bath and the metal sheet prevent excessive heat radiation in the area of the standing surface of the grill. Therefore you should always grill food **using water** and **with the reflective metal sheet in place.**
Before using for the first time, fill the grill tray with water and use it for 15 minutes to remove the protective film from the heating coil. Select the MAX thermostat position. The presence of smoke is normal. Make sure that a sufficient level of ventilation is available.
Preheat the device before use for approximately 5 minutes.

Usage

· Insert the plug in a duly installed 230V a.c. 60Hz protective contact socket.
· Fill in 1.5 L of cold water up to the “MAX” mark in the trough.
MAX: 1.5 L COLD WATER
· Set the thermostat for the desired use: a low or medium temperature for warming or cooling, MAX. for rapid cooking and grilling. The LED shuts off when the desired temperature is reached.
· Lay the food directly on the grill grid. Never use plates, trays or aluminum foil beneath the food. The grilling time depends on the thickness of the food and the set temperature. Thick foods are grilled more quickly by piercing it with metal skewers. Turn the food from time to time.
· The height of the grill grid can be varied. Please see illustration 2.
· Should the water level drop below the MIN mark after continuous use, pull the plug from the socket and fill with water until the MAX mark is reached. Do not pour any cold water over the hot heating element. Otherwise this may be damaged.
Switching-off: Turn the thermostat to “0” and pull the plug.

Troubleshooting

The heating element is fitted with a safety switch. This prevents the heating element being operated outside the grill tray. If the heating does not switch on, please check the mains connection and whether the heating element is fitted correctly into the grill tray.

- The appliance is for household indoor use only!

Cleaning

· Always pull the plug from the mains socket before cleaning and wait until the until has cooled down.
· Clean the unit with a slightly dampened cloth. Never dip the heating element into water!
·The gridiron, reflective metal sheet and trough can be cleaned in soapy water.
·Never use a steel brush or other scratching objects.
·Assemble all the parts as shown in the diagram.

This device has been tested according to all relevant current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest safety regulations.
Subject to technical changes without prior notice.

Caution

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

2. Keep the appliance and its cord out of reach of children less than 8 years.

3. The temperature of accessible surfaces may be high when the appliance is operating.

4. This appliance is intended to be used in household and similar applications such as:
   – staff kitchen areas in shops, offices and other working environments;
   – farm houses;
   – by clients in hotels, motels and other residential type environments;
   – bed and breakfast type environments.

EUREKA®

Thank you for patronizing our products!

For more comments and suggestions,
please call our hotline numbers:

0998 584 2057 / 0917 814 5356

EUREKA ELECTRIC APPLIANCES PHILIPPINES CORP.
E. Rodriguez Rd., Oxford Compd., Brgy. Sta. Rosa I, Marilao, Bulacan



eurekahomeappliances.com
EurekaHomeAppliances
eurekahomeappliancesph
eurekahomeappliances