EUREKA®

1.5-Liter Digital Coffee Maker

INSTRUCTION MANUAL

ECM 1.5LD



PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE APPLIANCE

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 2

SHORT CORD INSTRUCTIONS 2

SPECIFICATIONS 3

PARTS DIAGRAM 3

CONTROL PANEL 4

WIRING DIAGRAM 4

BEFORE FIRST USE 4

OPERATING INSTRUCTIONS 5

COFFEE-MAKING HINTS AND TIPS 6

CLEANING AND MAINTENANCE 6

IMPORTANT SAFEGUARDS

1. Read all instructions before operating or using this appliance.
2. Do not touch hot surfaces.
3. To protect against electrical shock, do not place cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to our authorized service facility for examination, repair, or adjustment. See warranty for service.
7. The use of an accessory not evaluated for use with this appliance may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Do not move entire unit when appliance is on or when thermal carafe contains hot liquids.
12. Prior to connecting or disconnecting the plug from the wall outlet, turn all controls to “OFF”.
13. Do not use appliance for other than intended use.
14. WARNING: To reduce the risk of fire or electric shock, do not remove bottom cover. No user-serviceable parts are inside. Repair should be done by authorized personnel only.
15. Scalding may occur if the filter basket is opened during the brewing cycle.
16. Always use cold filtered or bottled water for best results. Warm water or other liquids could cause damage to the coffee maker.
17. Scalding may occur if the water reservoir cover is lifted or removed during the brewing cycle.
18. If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid a hazard.

SHORT CORD INSTRUCTIONS

Do not attempt to modify the plug in any way.

A short power-supply cord is provided to reduce the risks of becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the cord should be arranged so it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

The appliance is of the grounded type, the extension cord should be a grounded – type 3 – wire cord.

SPECIFICATIONS

ITEM NAME	EUREKA 1.5-Liter Digital Coffee Maker
ITEM CODE	ECM 1.5LD
RATED VOLTAGE	230V a.c.
RATED FREQUENCY	60 Hz
RATED POWER	900 W
UNIT DIMENSION	230 x 167 x 322 mm
BOX DIMENSION	262 x 183 x 344 mm
GROSS / NET WEIGHT	2.10 kg / 1.80 kg
COLOR	Black + Silver

PARTS DIAGRAM

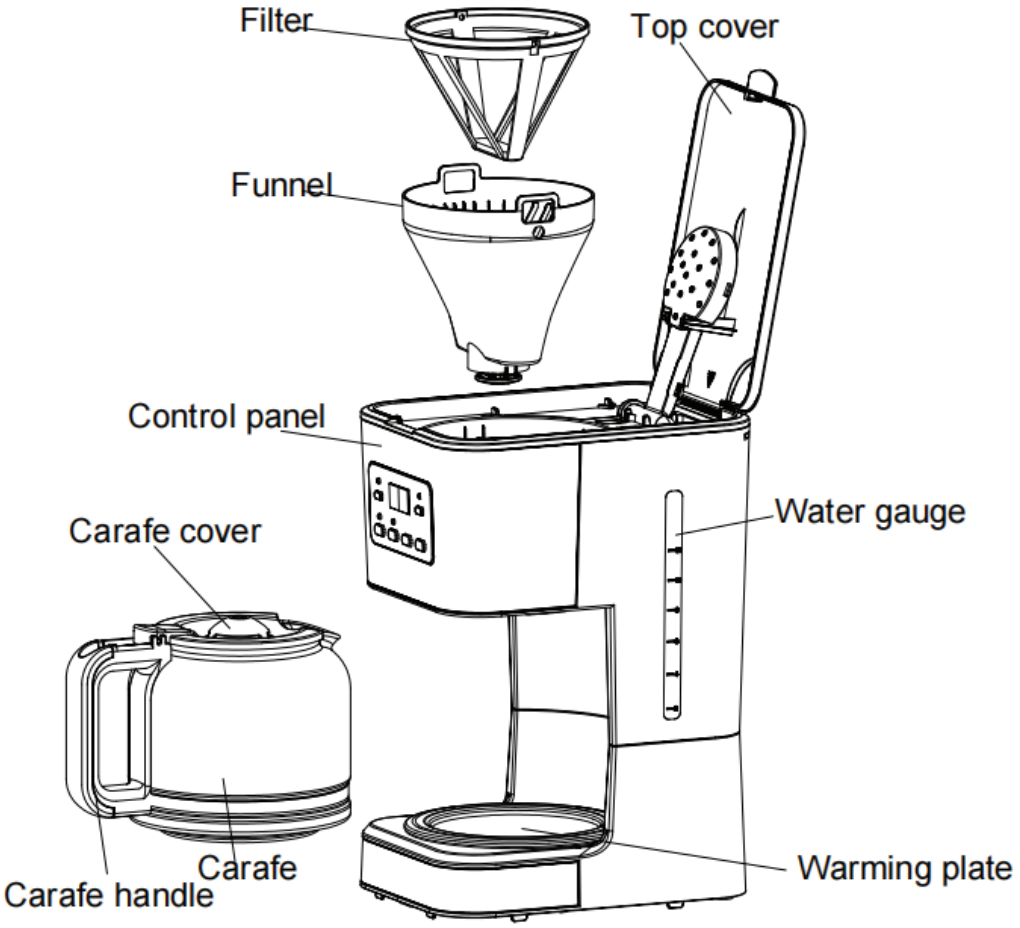

CONTROL PANEL

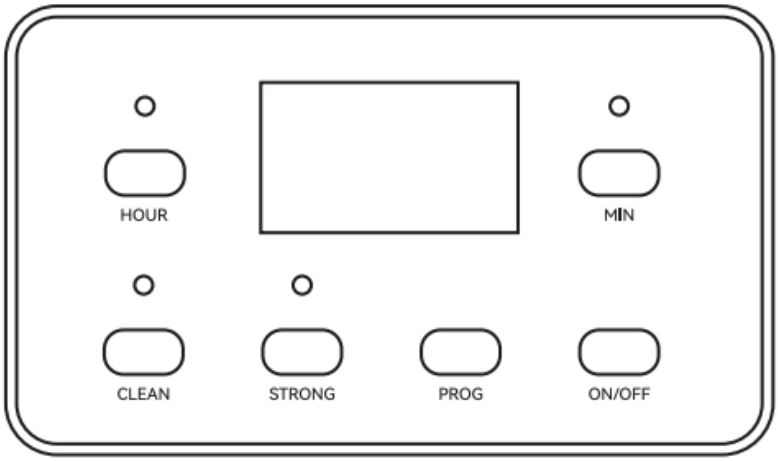

1. **ON/OFF button:** Press to turn the appliance on and off.
2. **PROG button:** Press to pre-set the auto-brew time.
3. **HOUR button:** Press to set the clock and pre-set time (00-23 in one hour increments).
4. **MIN button:** Press to set the clockand pre-set time (00-59 in one minute increments).
5. **STRONG button:** Press to lengthen the brewing time and thus alter the strength of the coffee. You can start the STRONG function during the brewing process or start the appliance using the STRONG button.
6. **CLEAN button:** Press to decalcify your appliance.

WIRING DIAGRAM

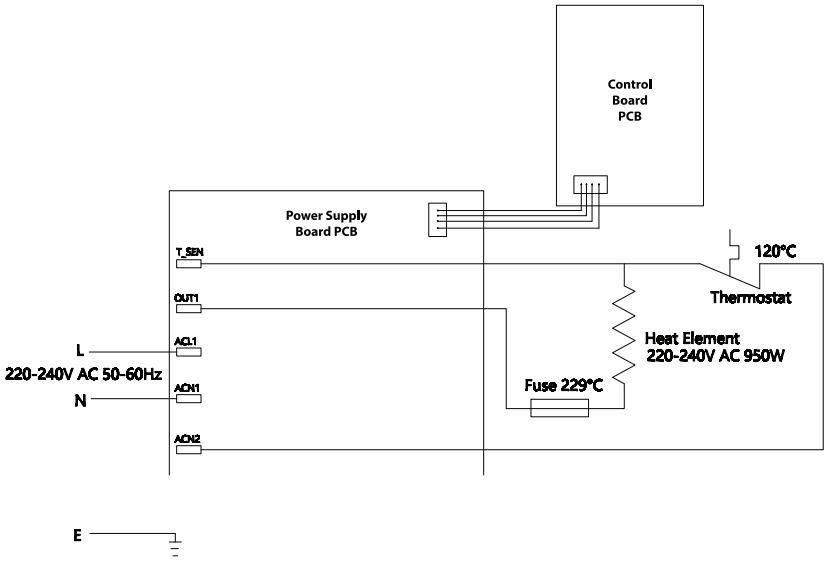

BEFORE FIRST USE

1. Before using the appliance for the first time remove the carafe and filter basket and wash them in warm, soapy water and then rinse and dry thoroughly.
2. Wipe the main body of the appliance with a soft, damp cloth and allow it to dry thoroughly. Do not immerse the mainbody in water or any other liguid. Never use harsh or abrasive cleaning detergents or scourers to clean the appliance as this could cause damage.
3. Clean your appliance before using it by running two brewing cycles (as described below) without coffee or a coffee filter.

OPERATING INSTRUCTIONS

1. Place the appliance on a hard, flat surface and connect it to the electricity supply.
2. Open the top cover and pour cold water (preferably bottled or filtered water) into the water chamber. The water level indicator shows the number of cups of coffee. Do not exceed the maximum fill level (12 cups). We do not recommend making fewer than four cups of coffee.
3. Place the carafe with the lid closed in the coffee maker, making sure it is fully in place to activate the PAUSE & SERVE function.
   CAUTION: If the carafe is not positioned properly on the warming plate, hot water or hot coffee could spill over.
4. With the top cover fully open, insert the filter basket (or coffee filtering paper) into the funnel.
5. Add coffee using the measuring scoop provided. Use the same coffee: water ratio you use when you prepare ground coffee.
6. Close the top cover and ensure it is closed securely.
7. Then:
   Fast Brewing
   - Press the ON/OFF button to immediately begin brewing coffee. The red LED light will flash to indicate the brewing cycle is taking place. The LCD display will read "ON" in the top right-hand corner along side the coffee cup icon.
   - If you want to stop the appliance during the brewing cycle, press the ON/OFF button again.

   Pre-set the auto-brew time
   - You can pre-set the auto-brew time using the PROG function. First, set the current time. When plugged in, the coffee maker will show “00:00” by default. Use the HOUR and MIN buttons to set the current time.
   - Set the desired auto-brew time. Press the PRO button once. The display will show "PROGRAM". Set the desired start time using the HOUR and MIN buttons. The appliance will now be in auto-brew mode. A green light will come on and the display will show "AUTO" the current time. Your coffee maker will automatically begin brewing at the pre-set time. When the brew cycle begins, the red light will flash to indicate the coffee maker is in operation and the green light will turn off.
   - Press the PRO button for about three seconds to cancel the auto-brew setting.

CAUTION: Never open the top cover during the brewing cycle even if no water is draining from the funnel. Extremely hot water/coffee can spill out from the filter basket and cause injury. If water/coffee is not draining from the filter basket, IMMEDIATELY unplug the appliance and wait 10 minutes before opening the top cover and checking the filter.

NOTE: This appliance has a PAUSE&SERVE function that allows you to pour a cup of coffee at any time before the brewing cycle is complete. If activated, the appliance will stop dripping automatically but for no longer than 30 seconds.

While the PAUSE&SERVE function is a convenient way to pour a cup of coffee mid-cycle,we recommend you wait until the completion of the brewing cycle as the strength of the coffee poured mid-cycle may vary from the finished brew and will affect the coffee's flavour.

8. When the brewing cycle ends and the water level indicates that the water chamber is empty, there will still be hot liquid in the filter basket. Wait a few minutes for the remaining liquid to drip through into the carafe.

The coffee maker will then enter warming mode and the red indicator light will remain on for 40 minutes. Always switch the appliance off when the carafe is empty or you no longer want to keep coffee hot.

9. Once the warming time is finished and the coffee grounds have cooled, open the top cover and carefully remove the filter by grasping the handle and lifting it straight up from the funnel compartment. Discard the used coffee grounds. Note: If two or more pots of coffee are needed, it is recommended that the appliance be allowed to cool for 10minutes between each pot. The filter should be rinsed after each brewing cycle.

COFFEE-MAKING HINTS AND TIPS

1. Always use fresh,cold water to fill the water chamber.
2. The quantity of ground coffee used can be adapted to taste. Use more or less coffee for a stronger or weaker flavour.
3. If using regular ground coffee, more grounds are needed per cup to achieve the same strength of flavour as finer ground coffee.
4. After using packaged ground coffee, tightly reseal and store it in a cool, dry place.
5. To achieve the best-tasting coffee, use whole coffee beans and finely grind them in a coffee grinder.
6. Do not reuse ground beans as this will greatly reduce the flavour of the coffee.
7. Reheating the resulting coffee is not recommended as this interferes with the taste.

CLEANING AND MAINTENANCE

1. Always unplug the appliance and allow it to cool before cleaning,
2. Wash the carafe, carafe lid and removable filter basket holder in hot, soapy water or the dishwasher (in the top rack). DO NOT place any other parts of the appliance in the dishwasher.
3. Never use harsh or abrasive cleaning products on any part of the appliance. To clean,simply wipe with a soft, damp cloth. The warming plate may be wiped with a clean, damp cloth when necessary. For hard to remove stains, use a plastic mesh pad or cloth dipped in vinegar.
   IMPORTANT: Never immerse the warming plate or main body of the appliance in water or any other liquid. Do not try to clean the inside of the water chamber with a cloth as this will leave lint residue that may clog the appliance. Simply rinse with cold water periodically.
4. **DECALCIFYING YOUR COFFEE MAKER (CLEAN function)**
   Calcium build-up frequently occursin drip coffee makers. This build-up is normal and caused by minerals commonly found in drinking water. The appliance needs to be cleaned periodically to remove any calcium or mineral deposits. You will know when your unit needs decalcifying when you notice an obvious slowing of the brewing cycle.
   We recommend decalcifying your unit with a solution of white vinegar and cold water. A solution of two tablespoons of white vinegar to one carafe of cold water works best. Pour this solution into the water chamber and follow normal operating instructions without a filter in the filter holder. Press the CLEAN button. When the brewing cycle is finished, empty the carafe and rinse with water. Refill the water chamber with cold water and repeat the brewing cycle twice more with water only. This will remove any remaining vinegar solution. We recommend you do this four times annually.

Note: After the appliance is used 60 times, the CLEAN light (green) will flash to remind users to clean the unit. Press the CLEAN button to clean the appliance (in standby mode) or the green light will keep flashing.

EUREKA®

Thank you for patronizing our products!

For more comments and suggestions,
please call our hotline numbers:

0998 584 2057 / 0917 814 5356

EUREKA ELECTRIC APPLIANCES PHILIPPINES CORP.
E. Rodriguez Rd., Oxford Compd., Brgy. Sta. Rosa I, Marilao, Bulacan

eurekahomeappliances.com
EurekaHomeAppliances
eurekahomeappliancesph
eurekahomeappliances