EUREKA®

1.8-Liter Digital Coffee Maker

INSTRUCTION MANUAL

ECM 1.8LD



PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE APPLIANCE

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 2

SPECIFICATIONS 3

WIRING DIAGRAM 3

PARTS DIAGRAM 4

CONTROL PANEL 4

OPERATIONS INSTRUCTIONS 5

CLEANING AND MAINTENANCE 6

CLEAN MINERAL PRECIPITATION 6

COFFEE MAKING TIPS 6

IMPORTANT SAFEGUARDS

Instructions for use:


1. Check whether the power supply voltage you use is consistent with the rated voltage of the product.
2. Keep the coffee pot away from children and people who cannot take care of themselves.
3. Do not use at high temperatures.
4. Unplug the coffee maker before using or cleaning it. Cool the coffee pot before installing or removing the parts and cleaning it.
5. When the power cord or plug is damaged or the coffee maker fails to work properly due to fault or other reasons, please stop using it immediately and take the coffee maker to the service provider or the nearest service center for testing and repair.
6. The coffee maker should be placed on a platform or flat place. Don't hang the power cord on the edge of the table or counter.
7. Do not use outside and keep the coffee maker in a dry environment.
8. Make sure the power cord does not come into contact with the hot part of the coffee maker.
9. Do not touch the coffee maker where the temperature is higher (funnel, heat preservation plate, etc.), only the plastic part with lower temperature or the handle of the cup.
10. When making coffee, if the glass leaks or water overflows from the lid, please stop using the coffee pot and reposition the glass so that the center hole of the lid is aligned with the water outlet hole of the funnel.
11. Don't let the coffee maker dry burn.
12. Only use the attached glass pot. Please handle them carefully to avoid damaging the glass pot. If the glass pot shows cracks, please stop using it.
13. Do not put the glass pot on the stove or other high temperature places.
14. Do not put the glass pot on the heat preservation plate to dry burn for a long time in the absence of water, Otherwise the glass pot will easily break.
15. Please put the plug into the power socket before use, and unplug the plug from the socket when the power is cut off.
16. Empty glass pot should not be placed directly on the hot plate for dry burning.
17. Keep this manual for future use.
18. If the power cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or a similar department.
19. Appliances must not be immersed in water.
20. Children should be supervised to ensure that they do not play with the appliance.

FOR HOUSEHOLD USE ONLY.


SPECIFICATIONS

ITEM NAME	EUREKA 1.8-Liter Digital Coffee Maker
ITEM CODE	ECM 1.8LD
RATED VOLTAGE	230V a.c.
RATED FREQUENCY	60 Hz
RATED POWER	1100 W
UNIT DIMENSION	170 x 220 x 365 mm
BOX DIMENSION	282 x 198 x 385 mm
GROSS / NET WEIGHT	3.0 kg / 2.26 kg
COLOR	Silver + Black


WIRING DIAGRAM

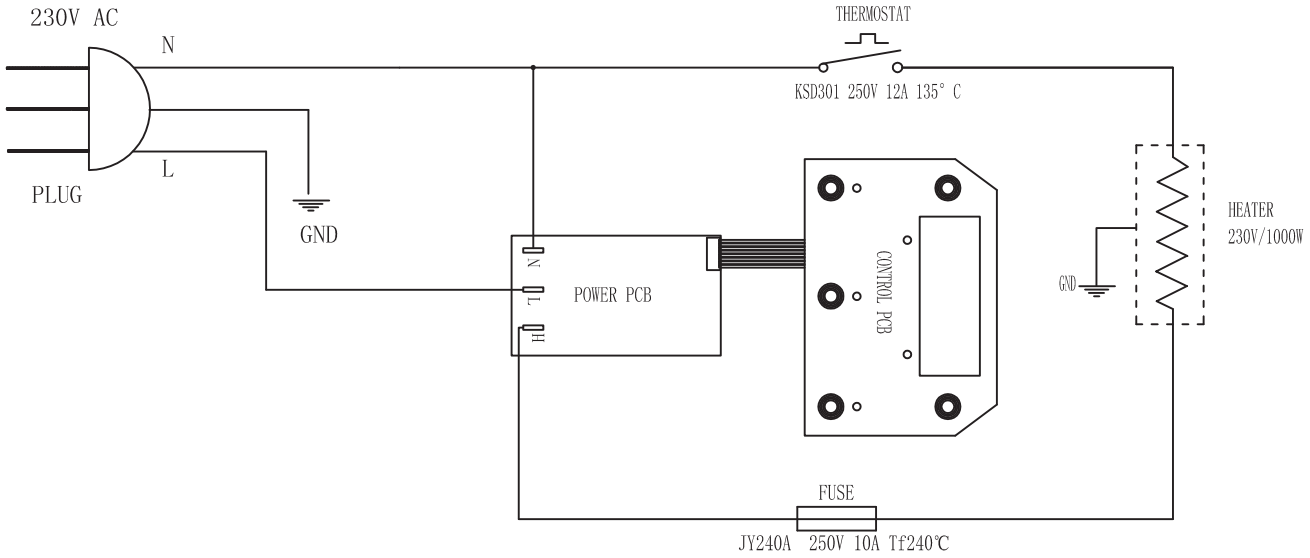

PARTS DIAGRAM

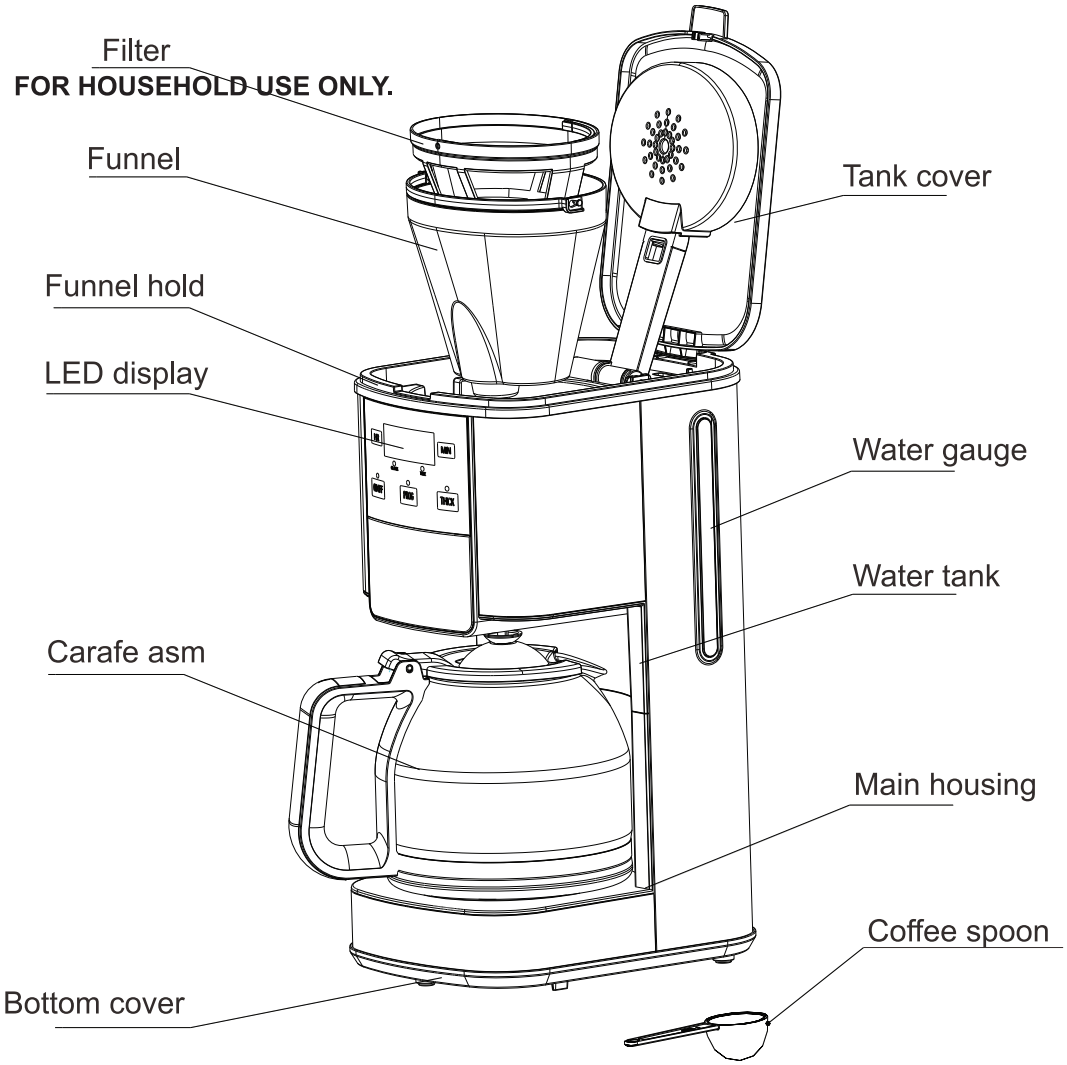

CONTROL PANEL

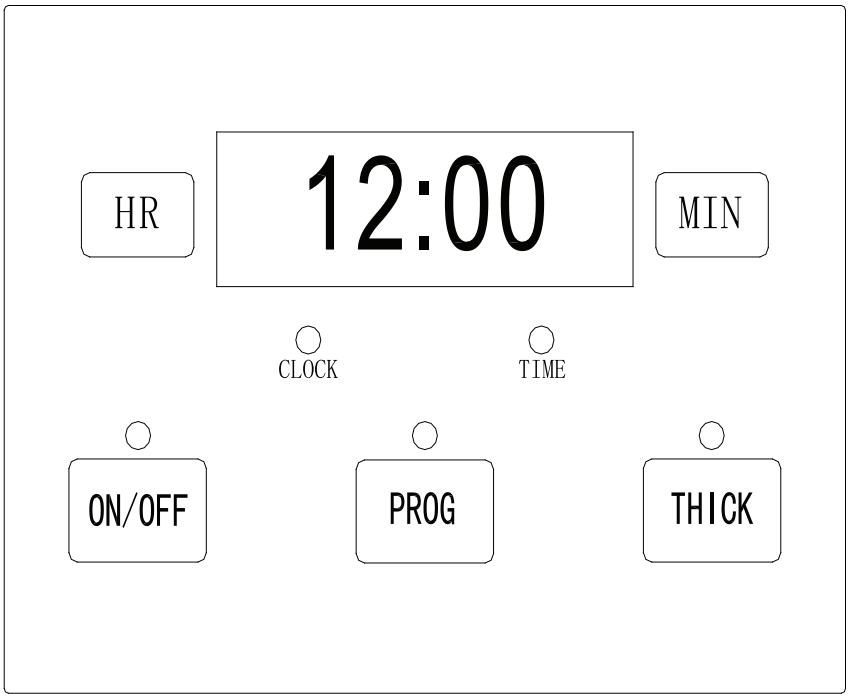

OPERATIONS INSTRUCTIONS

Check whether the accessories are complete and whether the products are damaged before the first use. Do not put coffee powder, follow the steps below to fill with water to the maximum water level, boil water once or twice, then pour away. Rinse glass pot, cover, funnels, filter, etc. thoroughly with warm water.

How to make instant coffee

1. Open the water tank cover and fill the water tank with a glass cup.
   Note: the water level shall not exceed the maximum scale and shall not be lower than the minimum scale.
2. Put in the funnel and make sure to put in place, then put in the filter.
3. One cup of coffee and one tablespoon of ground coffee, add coffee powder to the strainer. You can also increase or decrease the amount of coffee according to your taste.
4. Gently shake the funnel to distribute the coffee evenly, and then cover the water tank cover and make sure it is fully buckled in place.
5. Place the glass pot horizontally on the heat preservation dish.
6. Connect to the power supply, and the coffee maker ring one, at this time, the screen will display "12:00" (such as the control panel).
7. Press the "on/off" button on the control panel, The red indicator above the button is on, and the coffee maker starts to work. During the work, just press the "on/off" button again at any time to stop the work. Pressing other keys does not work on the working, and chirped three times.
8. Do not open the cover of the water tank in the process of making coffee, so as not to damage the coffee maker by steam scald or hot water reflux.
9. Wait until the drip is over (about a minute after you stop), you can take out the glass pot, pour out the coffee and enjoy. Note: since the coffee powder absorbs a certain amount of water, therefore the coffee poured out may be a little less than the water poured in, and when operating, the heat preservation plate will be very hot, please do not touch!
10. Turn off the power supply after use and unplug it.
    Note: do not dip the coffee maker or power cord into water or other liquids, also the temperature of the freshly brewed coffee is very high, be careful when you pour your coffee to avoid being scalded by the boiling coffee.

Programmed Brewing

This coffee maker has the function of making appointment for making coffee, if the above instant coffee is ready, follow steps 1-6. If it's 8:30 and you want the coffee maker to make coffee automatically at 14:30, follow these steps:

(**Note:** the machine time is displayed in 24 hours).

1. Press the "program (PROG)" button on the control panel,the orange indicator light corresponding to "clockwise (CLOCK)" is on. The current time 8:30 is set by pressing the "hour" and "minute" buttons repeatedly.
2. Press the "program (PROG)" button again. The corresponding white indicator light of "appointment (TIME)" is on, now you can also press the "hour" and "minute" buttons in a row, set the appointment time to 14:30. After setting the reservation time, if there is no other action within 15 seconds, The display automatically jumps back to the "clockwise (CLOCK)" time, and the corresponding indicator lights are off.
3. Press the "program (PROG)" button again, "Program (PROG)" corresponds to the green indicator light on to enter the appointment status, the whole machine carries out automatic reservation work stage.
4. The coffee maker starts automatically at the scheduled time, (the "PROG" green indicator is OFF and the "ON/OFF" red indicator is ON). After the coffee is cooked, if the power is not cut off, the coffee pot is kept in a warm state,the coffee maker will automatically cut off the power after working for 40 minutes, and all indicator lights will be off. (Note:Only Numbers are displayed after the power is cut off.)
5. **Note:** if you need to cancel the appointment make the coffee, press the "program (PROG)" button again, and the green indicator is off, the product stops the reservation setting and enters the standby state, press the "on/off" button to enter instant coffee mode, If you need to change the appointment time before the appointment time, then press the "program (PROG)" button three times in a row to reset the appointment time.

Boil the espresso coffee

This coffee pot has the function of making stronger coffee. As above, instant coffee is prepared by steps 1-6.

1. Press the "stronger coffee (THICK)" button on the control panel,the blue indicator light above the button is on, and then press "on/off (on/off)" button. The red indicator light above the button is on, and the coffee pot starts to work. Make stronger coffee takes longer to brew, the coffee is stronger.
2. If you need to the appointment make the "stronger coffee(THICK)", press the "stronger coffee(THICK)" button, and the blue indicator light is on. If the above reservation is completed in steps 1-3, the whole machine will automatically reserve the "stronger coffee(THICK)" work.
3. The coffee maker starts automatically at the scheduled time (" PROG "green indicator is OFF, " ON/OFF "red indicator is ON at the same time as" THICK "blue indicator). After the coffee is cooked, if the power is not cut off, the coffee pot is kept in a warm state, the coffee maker will automatically cut off the power after working for 40 minutes, and all indicator lights will be off. (Note:Only Numbers are displayed after the power is cut off.)

CLEANING AND MAINTENANCE

Warning: Please remove the plug before cleaning and let the heat preservation plate cool enough to prevent burns. Do not dip the coffee pot or power cord into water or other liquids to avoid danger.

1. After each use, open the water tank cover, take out the funnel, and pour out the coffee grounds in the filter net, wash the filter net and glass components with warm water, and add cleaning liquid if necessary. Note: these parts are also can puted them in dishwasher to wash.
2. Scrub the outer surface of the product with a soft wet cloth to remove dirt.
3. When making coffee, some drops of water may form on the funnel and fall onto the hot plate. Therefore, the r relevant parts should be cleaned after each use.

CLEAN MINERAL PRECIPITATION

In order to ensure the effective operation of the coffee pot, you should take into account the water quality in your area and the use frequency of electrical appliances, remove minerals regularly, the details are as follows: pour an appropriate amount of white vinegar solution (one part vinegar and three parts water) into the water tank, but do not put coffee, press "instant coffee" pot vinegar water, if necessary, reheat the vinegar mixture until no yellow liquid comes out. Then pour out the vinegar water and boil water with pure water until it has no vinegar taste.

COFFEE MAKING TIPS

1. Make good coffee, coffee pot must be clean, therefore, it is necessary to clean the coffee pot regularly according to the "cleaning and maintenance" section, and always use fresh cold water for making coffee.
2. Store unused coffee grounds in a cool, dry place. If a packet of coffee powder is opened and used up, it should be tightly sealed and put back in the refrigerator to keep it fresh.
3. For best results, buy your own coffee beans and grind them before making a pot.
4. Do not reuse coffee powder, or the aroma of coffee will be reduced a lot. We also don't recommend reheating the coffee, because when just boil coffee, the aroma of coffee is the strongest.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations :

hand in thenon-working electrical equipments to an appropriate waste disposal center.

EUREKA®

Thank you for patronizing our products!

For more comments and suggestions,
please call our hotline numbers:

0998 584 2057 / 0917 814 5356

EUREKA ELECTRIC APPLIANCES PHILIPPINES CORP.
E. Rodriguez Rd., Oxford Compd., Brgy. Sta. Rosa I, Marilao, Bulacan

eurekahomeappliances.com
EurekaHomeAppliances
eurekahomeappliancesph
eurekahomeappliances